


Tadger Group Gas Install Instructions for Kit #:


A4-QC-F, A5-QC-F, A6-QC-F & A6L-QC-F (90 degree elbow)

If the female quick connect has a 90 degree bend (A6L-QC-F), the same procedure will apply but the diagrams below do not show the elbow.


ORIGINAL ENGINE FUEL LINE SETUP

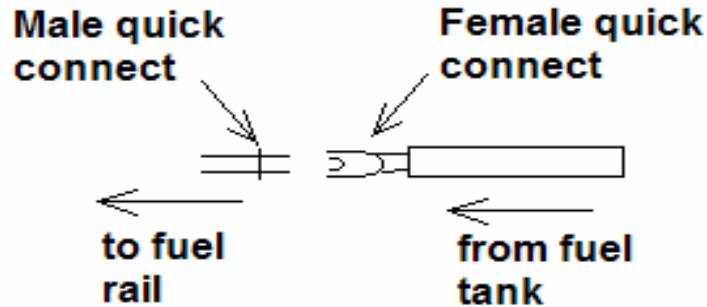

TADGER KIT

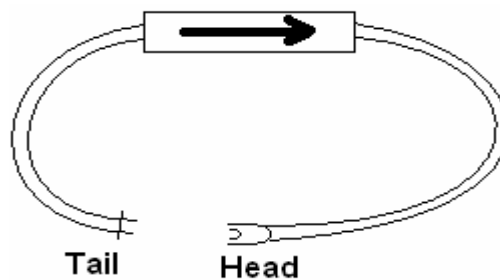

INSTALLATION

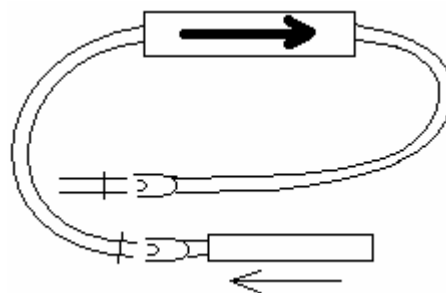

1. Locate quick connect in fuel line, where fuel line from tank connects to engine fuel rail or line leading to fuel rail.
2. Separate male and female parts of quick connect. A quick disconnect tool is required for most applications.
3. Insert tail of kit into end of fuel line from tank.
4. Attach head end of kit to male tube leading to fuel rail.
5. Tie off Tadger kit securely with ties to minimize movement. It does not require a solid mounting bracket. Use loom or rubber to separate components at any point where rubbing may occur.

Bill Tallman
Tadger Installation
519-643-8255