



Tadger Group Gas Install Instructions for Kit #:

C9-QC-F, C8-QC-F


ORIGINAL ENGINE FUEL LINE SETUP

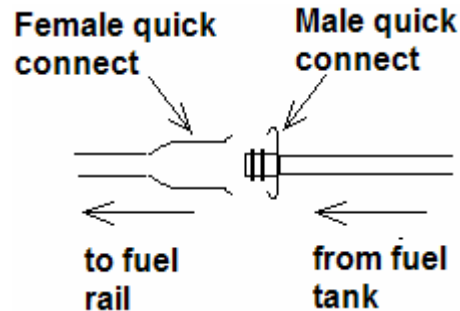

TADGER KIT

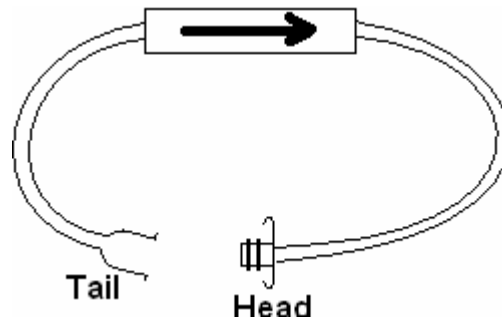

INSTALLATION

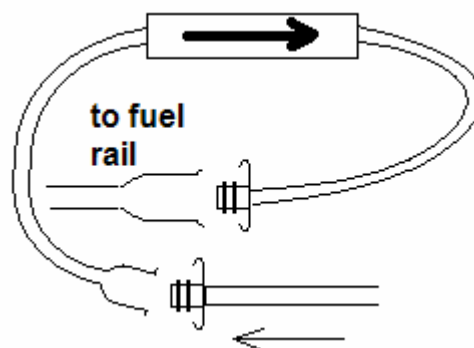

1. Locate quick connect in fuel line, where fuel line from tank connects to engine fuel rail or line leading to fuel rail. If not visible follow backwards from fuel rail.
2. Separate male and female parts of quick connect. A quick disconnect tool is required.
3. Insert head of kit into female cylinder located on or near fuel rail.
4. Attach tail end of kit to male quick connect coming from fuel tank.
5. Tie off Tadger kit securely with ties to minimize movement. It does not require a solid mounting bracket. Use loom or rubber to separate components at any point where rubbing may occur.

**Bill Tallman
Tadger Installation
519-643-8255**