



CAT 3508, 3512


ORIGINAL ENGINE FUEL LINE SETUP

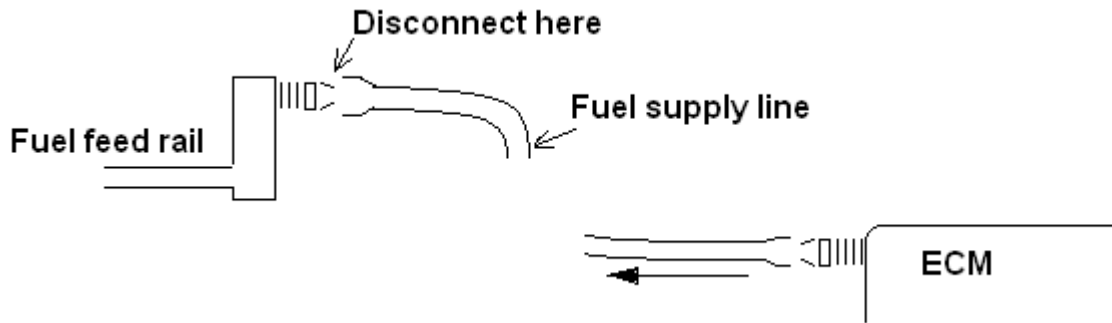

TADGER KIT



INSTALLATION

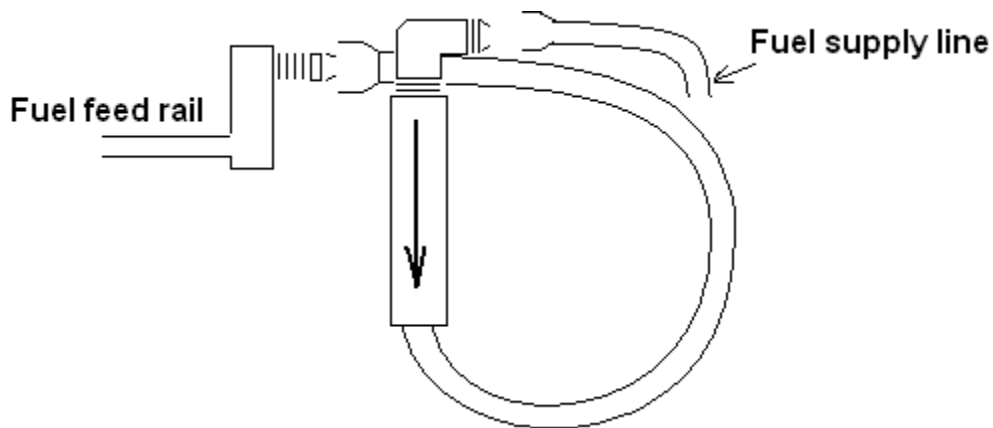

1. Follow fuel supply line from ECM to each head and locate fuel feed rail on each side of engine. Note that return fuel rail may also have same #10 JIC fittings. Determine which is **feed** and which is **return** before continuing. Tadger goes in fuel supply line.
2. Put wrench on fitting at fuel feed rail and disconnect fuel supply line from fitting.
3. Insert tail of kit into fuel supply line. Position kit as shown.
4. Attach hose on head end of kit to fitting leading to fuel feed rail.
5. Tighten all connections. Tie off kit where it crosses itself and to nearby hoses, using loom or rubber where they touch together.
6. Tie off Tadger kit securely with ties to minimize movement. It does not require a solid mounting bracket. If metal on metal, wrap Tadger kit with loom to avoid wear or damage.
7. Repeat steps 1 – 6 for fuel feed rail on other side of engine.

Bill Tallman

Tadger Installation Team 519-643-8255 cell