



Cat C13 & C11


Original Engine Fuel Line Setup

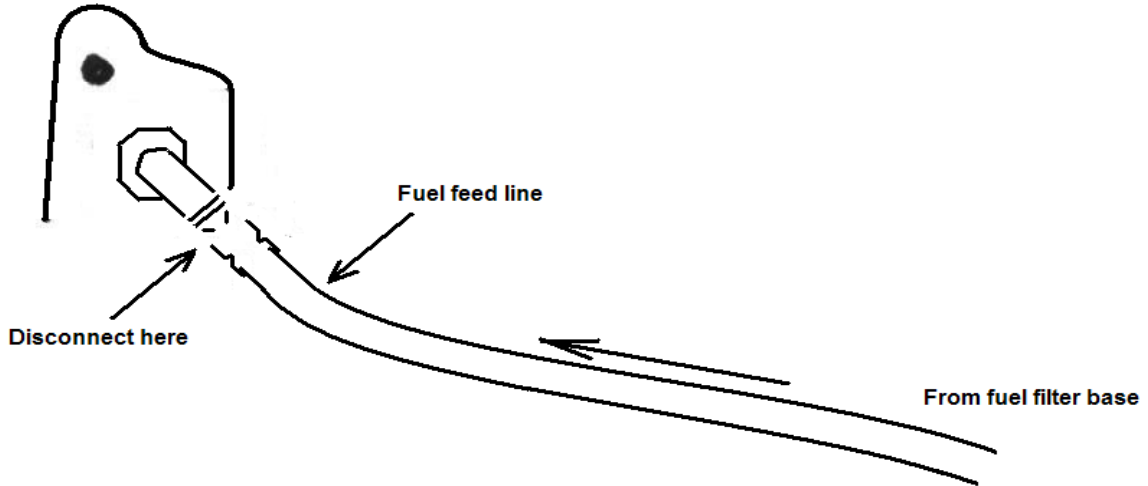

Tadger Kit

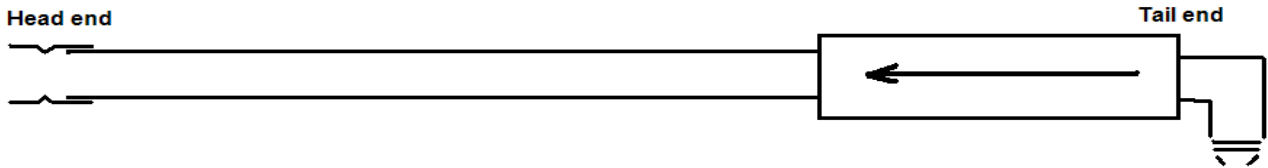

Installation

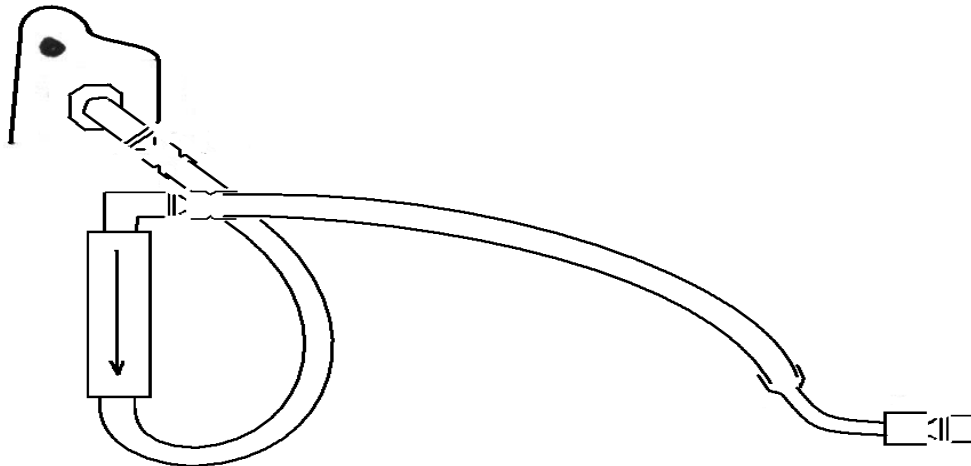

1. Disconnect fuel feed line at head.
2. Attach tail end of Tadger kit, to end of fuel feed line.
3. Attach hose on head end of kit to elbow fitting going into head (where fuel feed line was disconnected). Move Tadger to upright position if it is easier to tie it off.
4. If positioning is not suitable, loosen nut around elbow fitting in head so that elbow can be rotated. Then tighten nut so elbow is locked in position.
5. Tie off in several places using heavy cable ties to minimize movement of Tadger. Tie off kit where it crosses itself and tie to nearby hoses or harnesses where possible.
6. If metal on metal, wrap Tadger kit with loom to avoid wear and damage.
7. Tie off all hoses that may rub or wear.

Bill Tallman

Tadger Installation Team 519-643-8255 cell