



# Cat C9

## Original Engine Fuel Line Setup


Fuel filters may be remote mounted

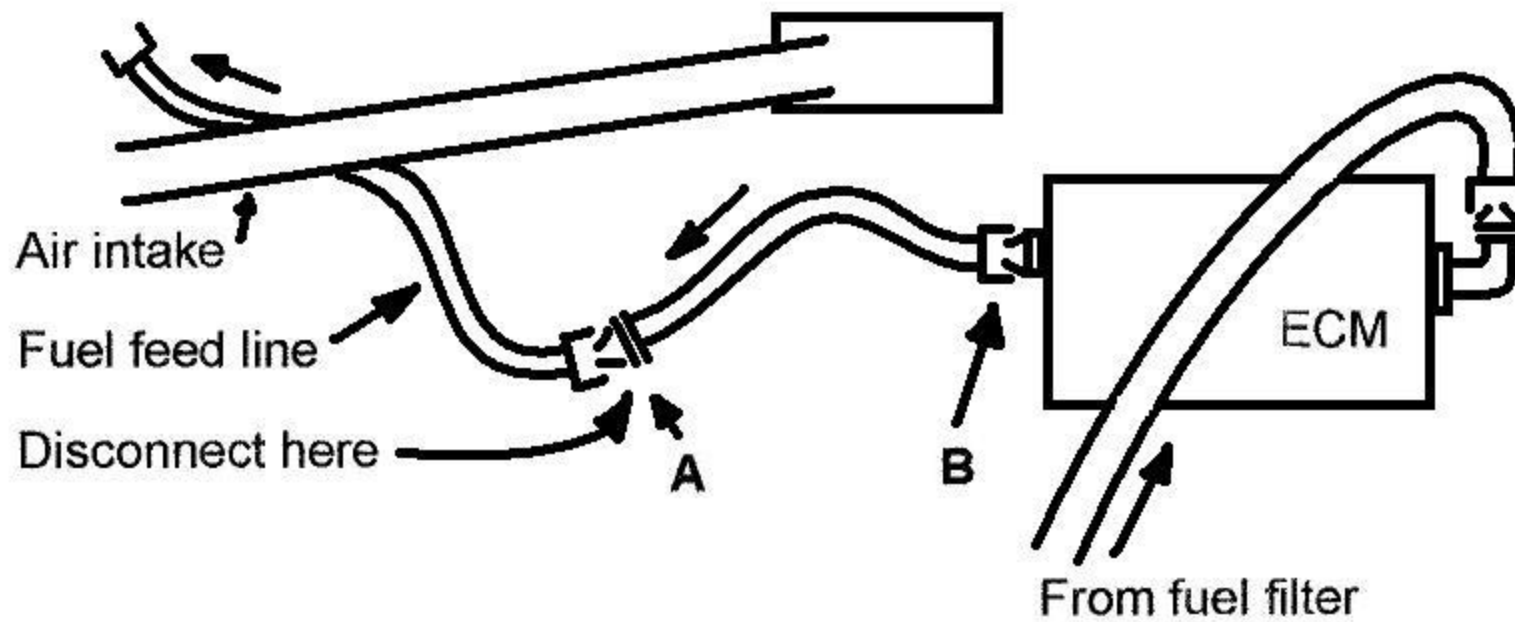

## Tadger Kit

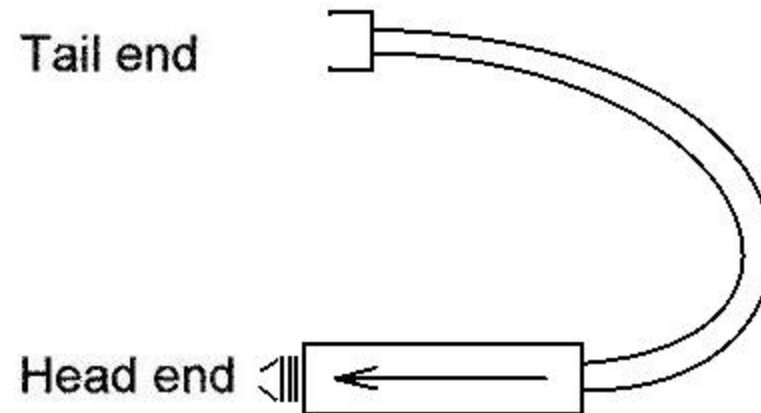

## Installation

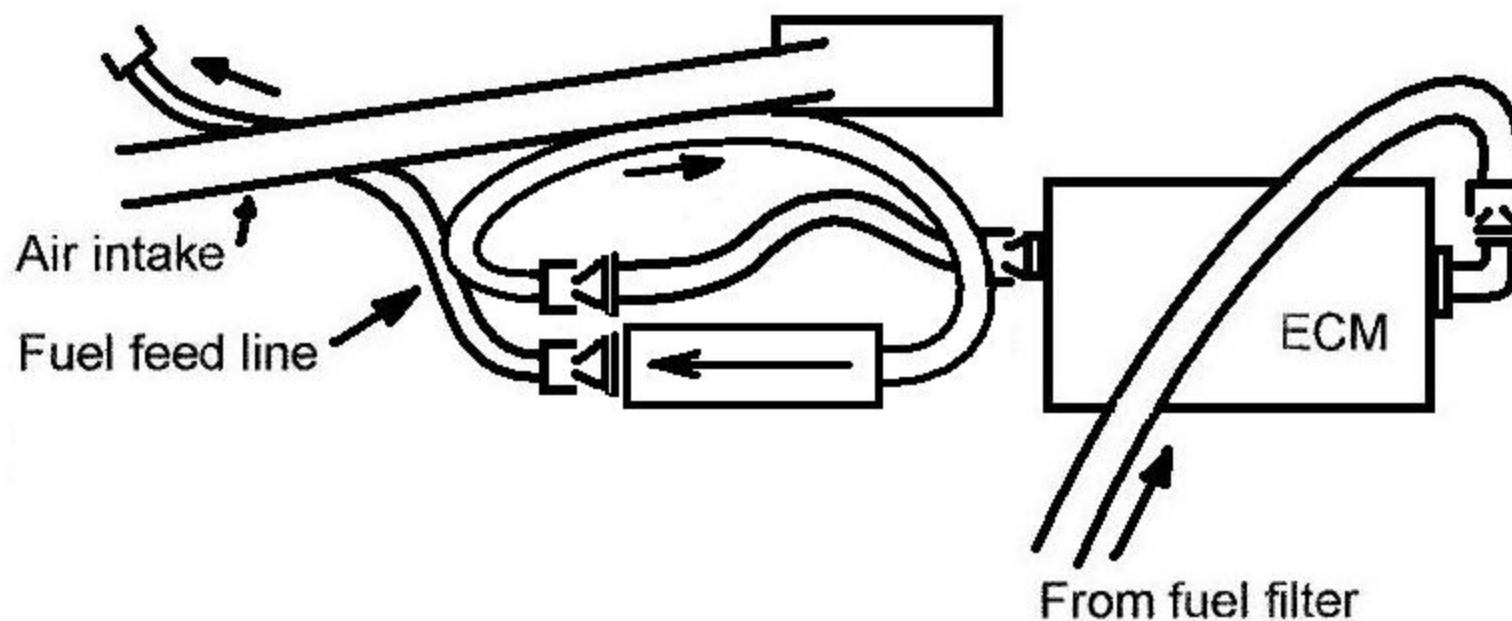

1. Disconnect fuel feed line at **A**. If this point is obstructed, disconnect at **B**.
2. Connect head end of Tadger to end of fuel feed line at **A** or **B**.
3. Attach tail end of Tadger kit to line coming from ECM, or to fitting on ECM.
4. Tighten all connections.
5. Tie off in several places using heavy cable ties to minimize movement of Tadger. Tie to air intake hose above it if possible.
6. If metal on metal, wrap Tadger kit with loom to avoid wear and damage.

**Bill Tallman**

**Tadger Installation Team 519-643-8255 cell**