




CUMMINS ISL new with quick connects

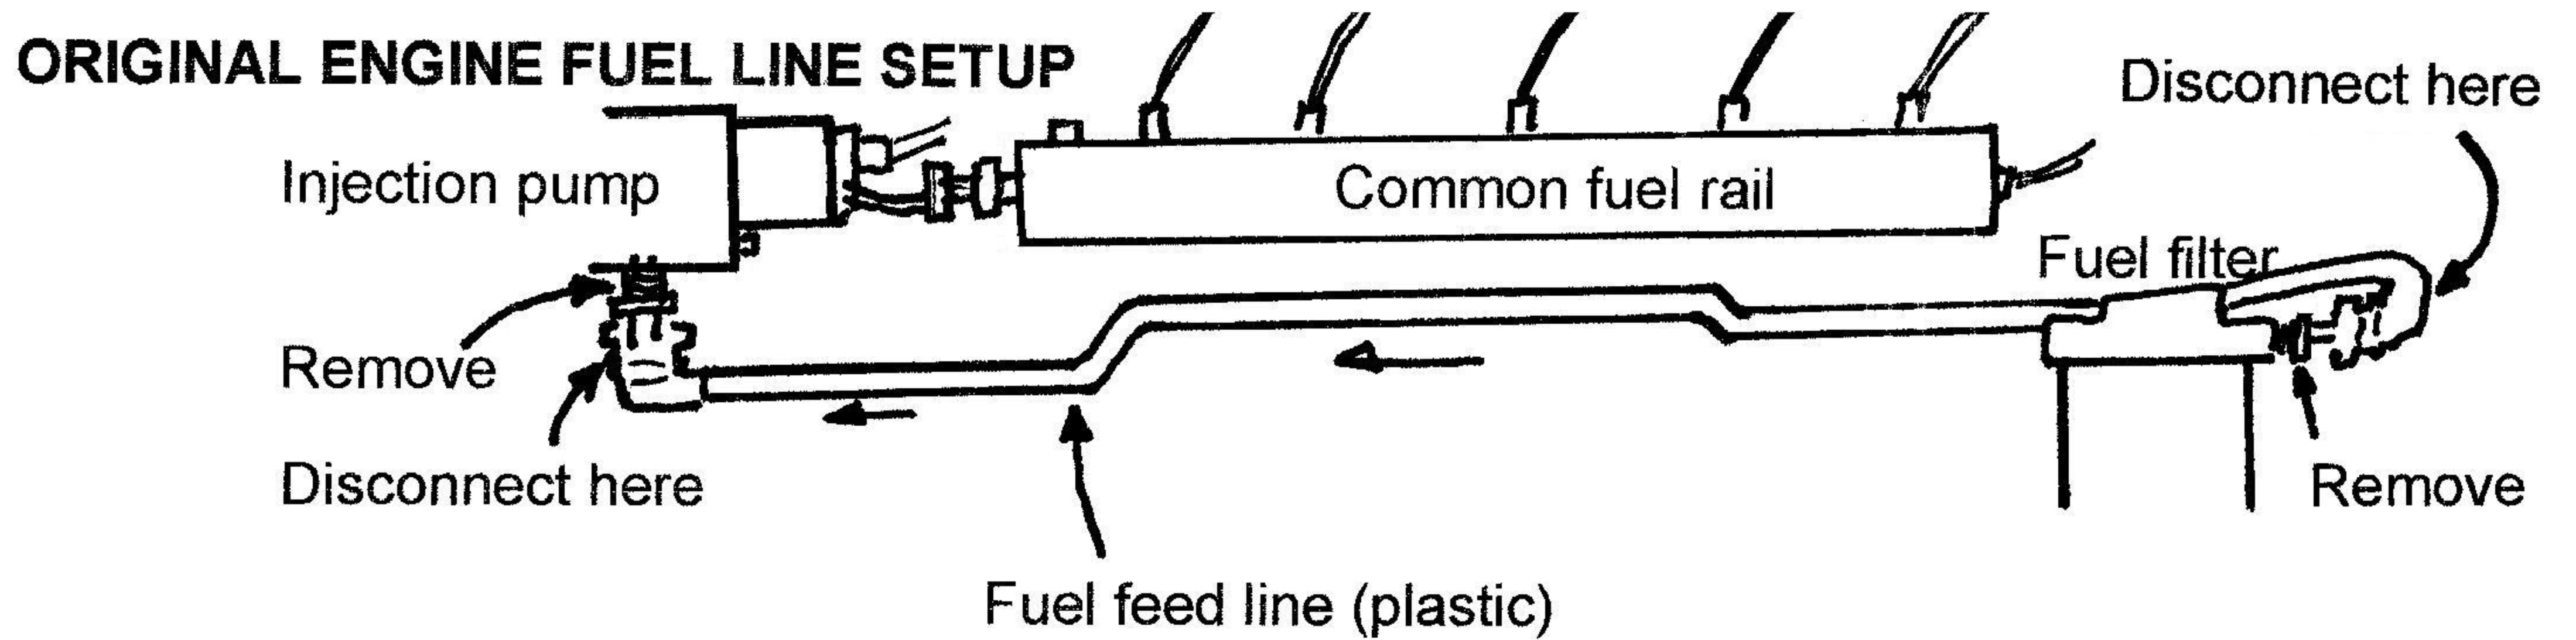

TADGER KIT

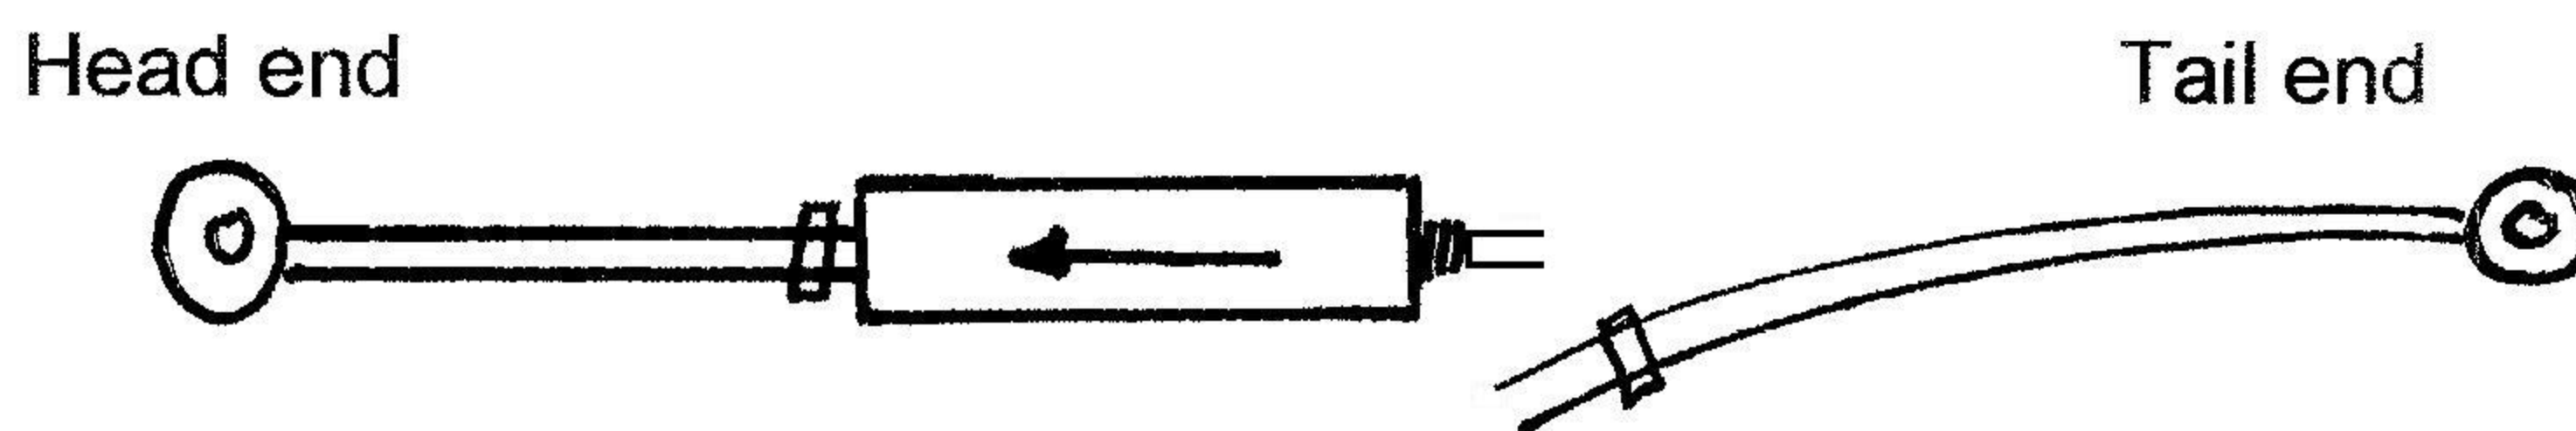

INSTALLATION

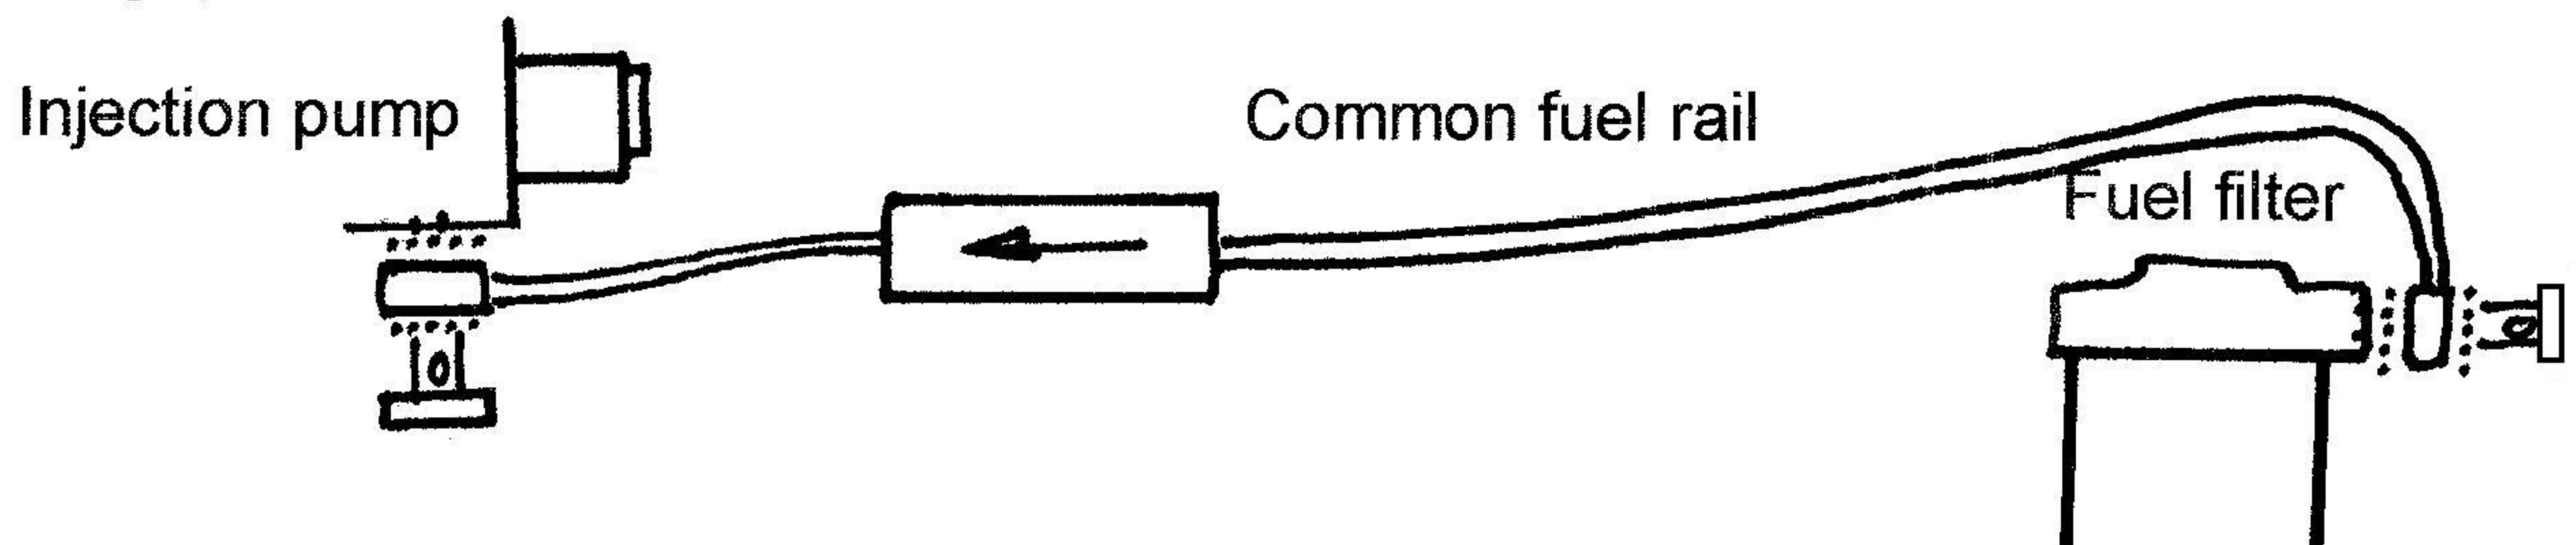

Before installing kit you will need two 14 mm banjo bolts (hollow bolts) and 4 washers. These do not come with the kit but may be ordered separately.

1. Disconnect fuel feed line at fuel filter and at pump (quick connects).
2. Remove fitting in bottom of pump to which fuel feed line was connected.
3. Remove fitting on filter to which fuel feed line was connected.
4. Determine length of hose needed on tail of kit. If fuel filter has been relocated, a longer hose will be required.
5. Attach head end of kit to pump using one banjo bolt and 2 washers, one washer on each side of banjo fitting.
6. Attach tail end of kit to filter using one banjo bolt and 2 washers, one washer on each side of banjo fitting.
7. Tie off Tadger kit securely to nearby hoses with heavy ties to minimize movement.
8. If metal on metal, wrap Tadger with loom to avoid wear and damage.

Bill Tallman

Tadger Installation Team 519-643-8255 cell