



CUMMINS ISM at Head


ORIGINAL ENGINE FUEL LINE SETUP

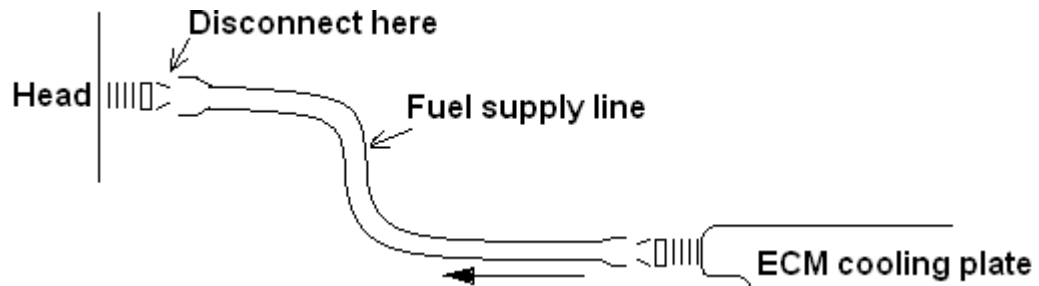

TADGER KIT



INSTALLATION

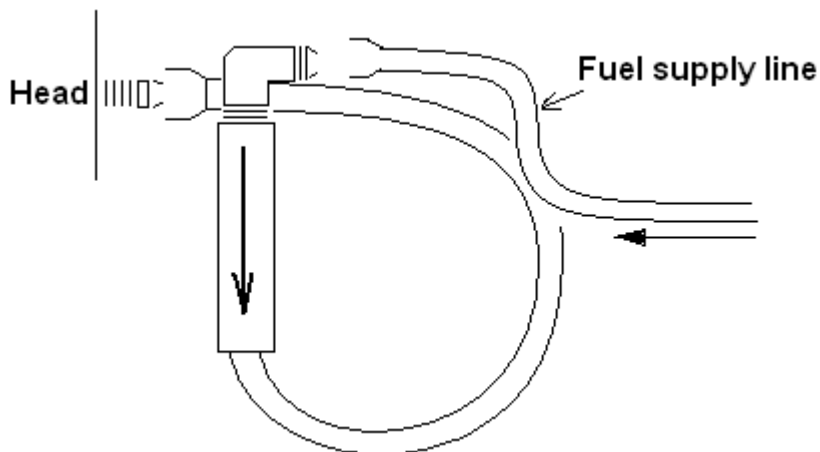

1. Locate fuel supply line from ECM cooling plate to head.
2. Note: Tadger may be positioned pointing upwards (inverted from how it is shown here).
3. Disconnect fuel supply line at head, and move it sideways about 1-2" (3-4 cm).
4. Connect tail end of Tadger kit to end of fuel supply line.
5. Connect head end of Tadger kit to fitting in engine head.
6. Tighten all connections.
7. Tie off Tadger kit to its own hose securely with ties. Tie also to other nearby hoses to minimize movement. It does not require a solid mounting bracket.
8. If metal on metal, wrap Tadger kit with loom or rubber hose to avoid wear and damage.

Bill Tallman

Tadger Installation Team 519-643-8255 cell