



CUMMINS N14 Plus Before Pump


ORIGINAL ENGINE FUEL LINE SETUP

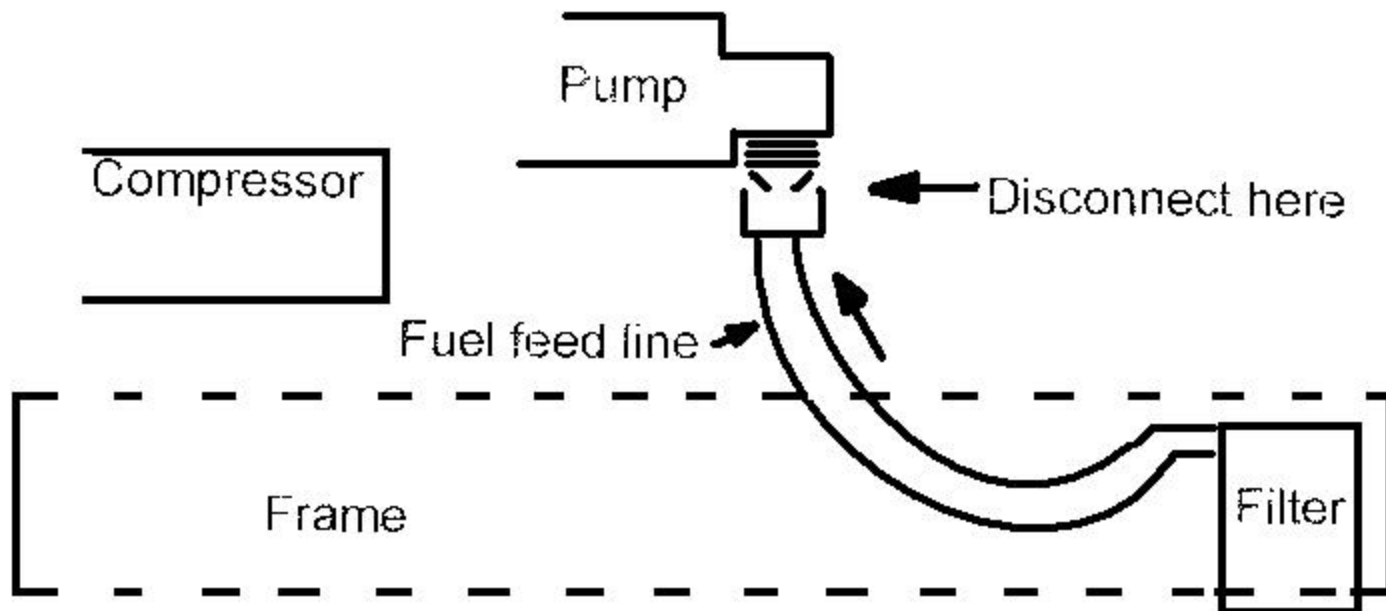

TADGER KIT

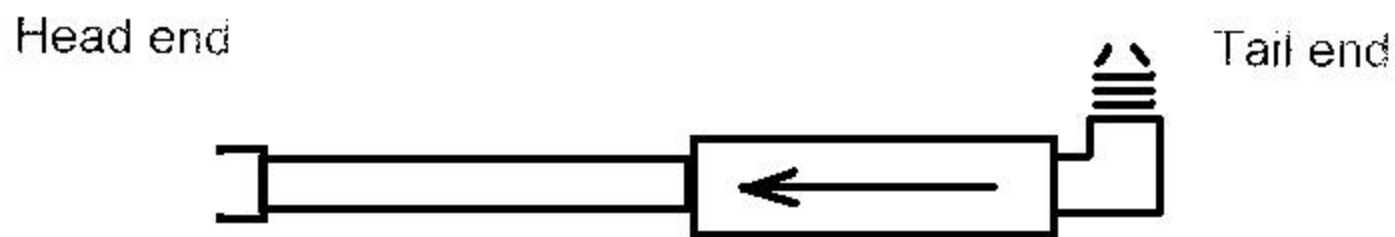

INSTALLATION

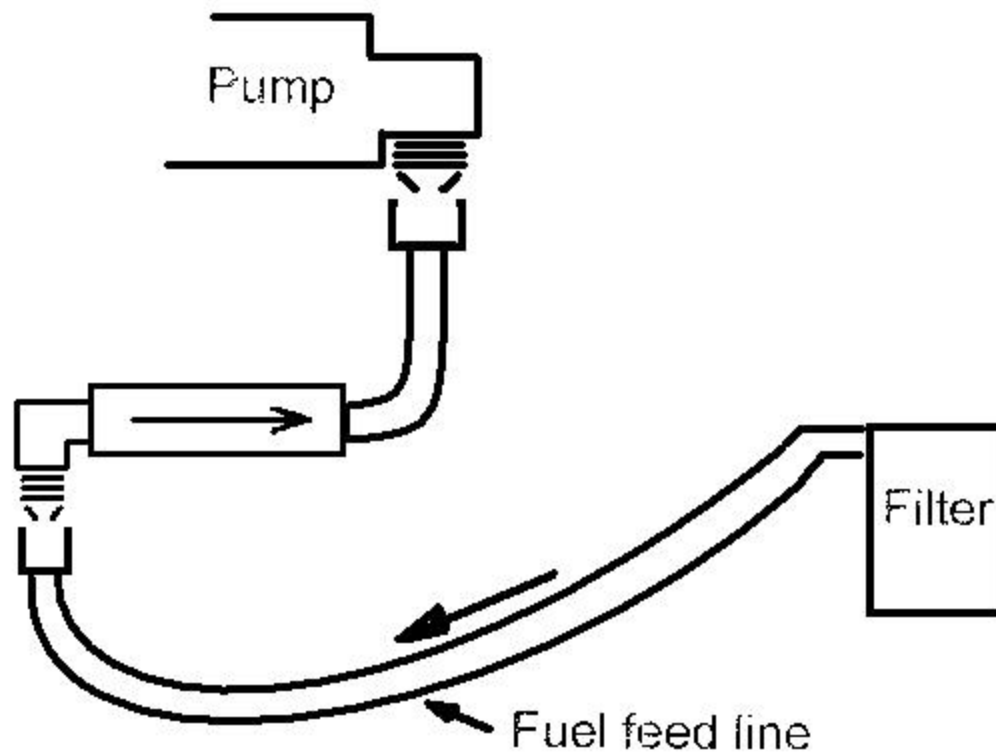

1. Disconnect fuel feed line at pump.
2. Attach head end of kit to fitting on pump.
3. Attach tail end of kit to end of fuel feed line.
4. Tie off Tadger kit securely with ties to minimize movement.
5. If metal on metal, wrap Tadger kit with loom to avoid wear and damage.

Bill Tallman

Tadger Installation Team 519-643-8255 cell