



Tadger Group Gas Install Instructions for Kit #:

D4-HB-1, D5-HB-1, D6-HB-1


ORIGINAL ENGINE FUEL LINE SETUP

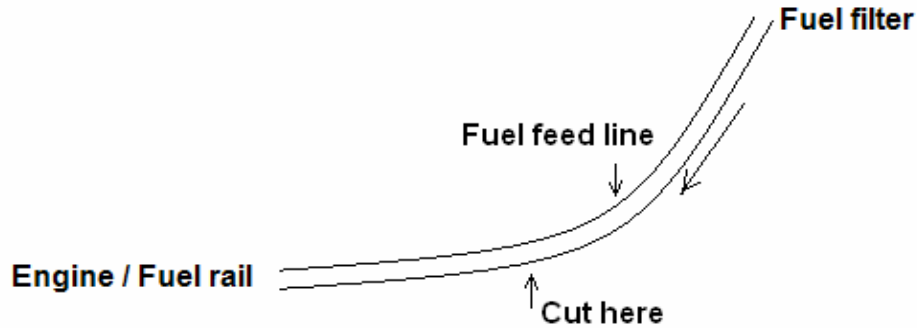

TADGER KIT

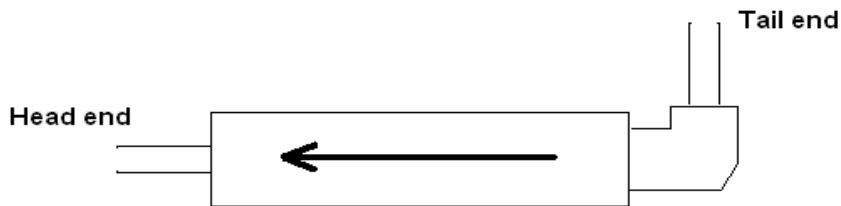

INSTALLATION

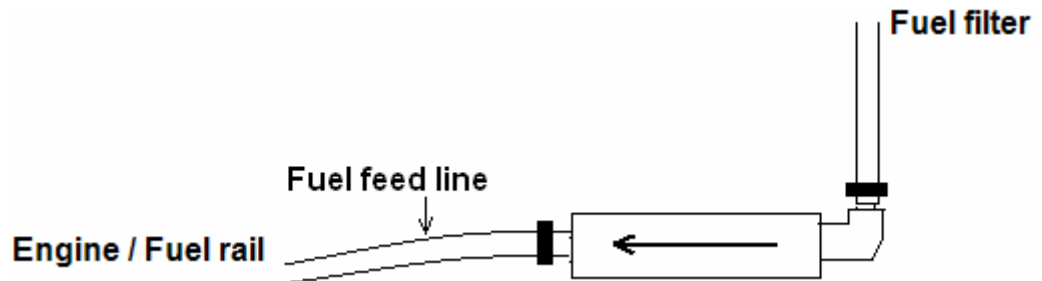

1. Locate fuel feed line, between fuel filter and engine.
2. See INSTALLATION diagram above to determine best place to cut fuel feed line. (usually about 1/2 to 2/3 of the way between the filter and engine)
3. Insert head of kit into end of fuel feed line leading to engine.
4. Attach tail end of kit to part of fuel feed line from filter or from fuel tank.
5. Tighten clamps. Check to make sure there are no kinks or sharp bends in hose.
6. Tie off Tadger kit securely with ties to minimize movement. It does not require a solid mounting bracket. Use loom or rubber to separate components at any point where rubbing may occur.

**Bill Tallman
Tadger Installation
519-643-8255**