



Tadger Group Gas Install Instructions for Kit #:

D4-HB-2, D5-HB-2, D6-HB-2


ORIGINAL ENGINE FUEL LINE SETUP

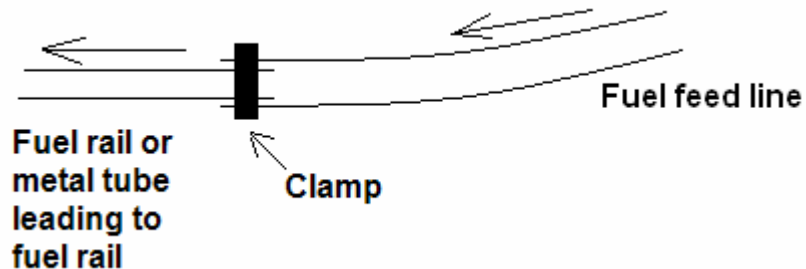

TADGER KIT

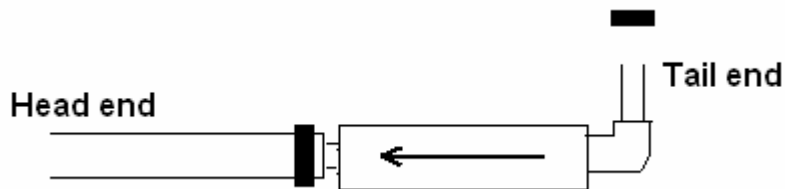

INSTALLATION

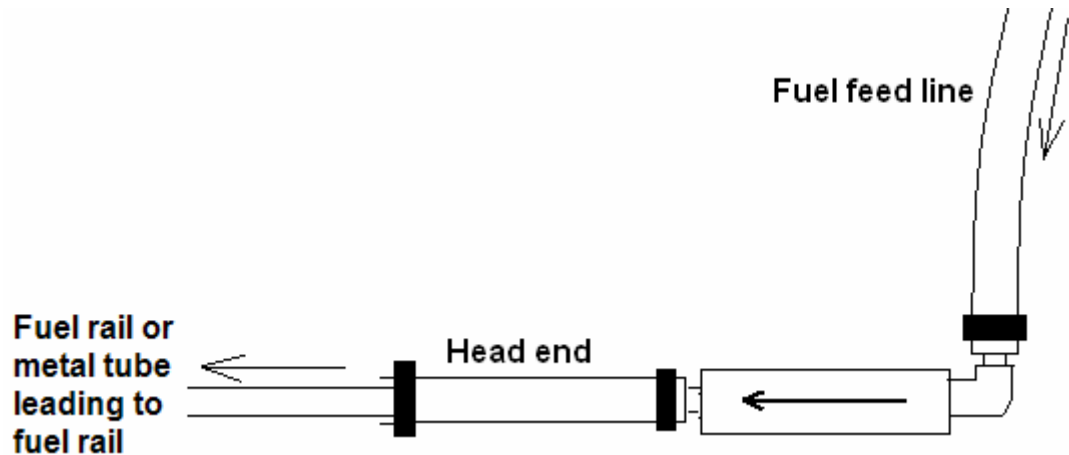

1. Locate flexible fuel feed line, near engine. Look for a point where fuel line meets fuel rail or metal tube leading to fuel rail. There should be a hose clamp at this location.
2. Loosen hose clamp and disconnect fuel feed line from fuel rail or metal tube.
3. Attach head of kit onto end of fuel rail or metal tube leading to engine.
4. Move fuel feed line and insert tail end of kit into it.
5. Check to make sure there are no kinks or sharp bends in hose. Tighten all clamps.
6. Tie off Tadger kit securely with ties to minimize movement. It does not require a solid mounting bracket. Use loom or rubber to separate components at any point where rubbing may occur.

Bill Tallman
Tadger Installation
519-643-8255