



Tadger Group Gas Install Instructions for Kit #:

**D4-HB-3, D5-HB-3, D6-HB-3**


**ORIGINAL ENGINE FUEL LINE SETUP**

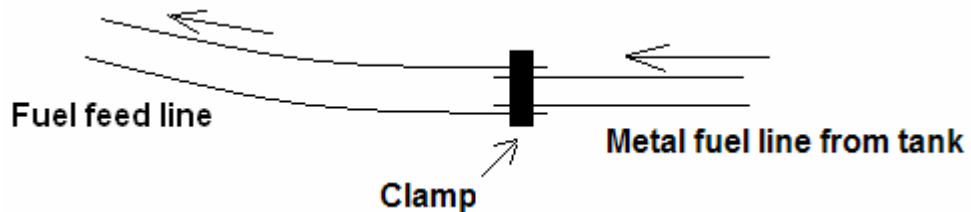

**TADGER KIT**

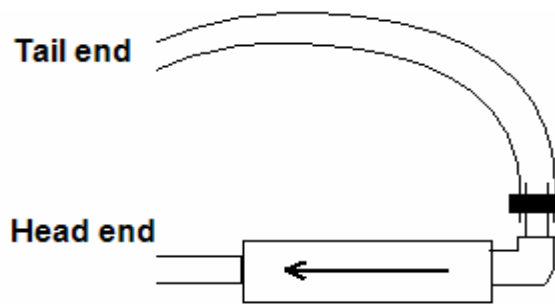

**INSTALLATION**

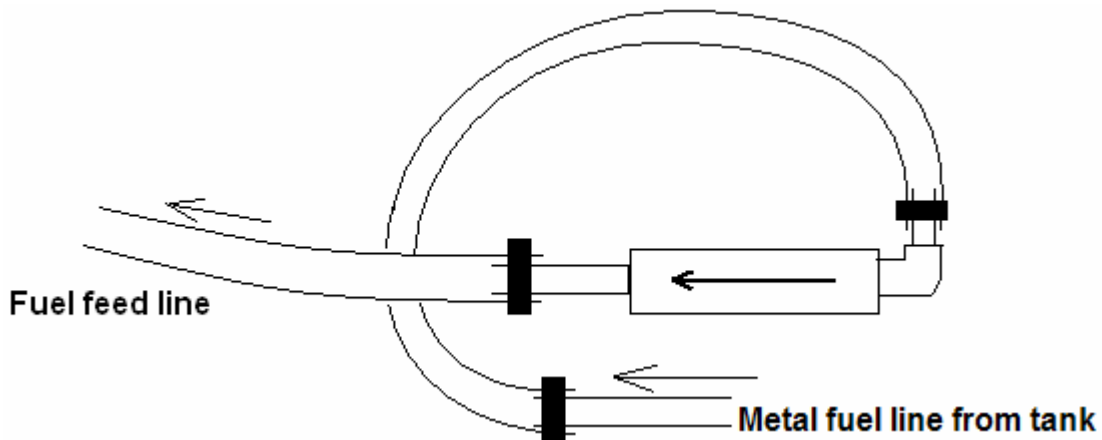

1. Locate flexible fuel feed line, usually near firewall. Look for a point where metal fuel line from tank meets flexible hose leading to engine, connected by a hose clamp.
2. Loosen hose clamp and disconnect fuel feed line from metal fuel line.
3. Insert head of kit into end of fuel feed line leading to engine.
4. Loop tail around and connect tail to metal tube from tank.
5. Check to make sure there are no kinks or sharp bends in hose. Tighten all 3 clamps.
6. Tie off Tadger kit securely with ties to minimize movement. It does not require a solid mounting bracket. Use loom or rubber to separate components at any point where rubbing may occur.

**Bill Tallman**  
**Tadger Installation**  
**519-643-8255**