



Ford 6 L 2004 - - -


ORIGINAL ENGINE FUEL LINE SETUP (Viewed from front of truck)

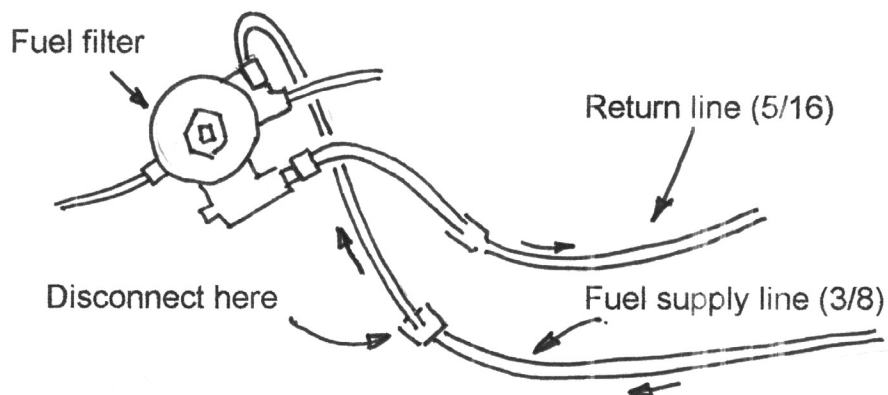

TADGER KIT

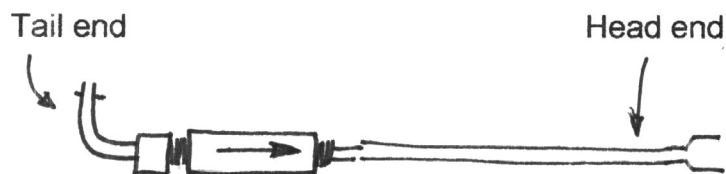

INSTALLATION

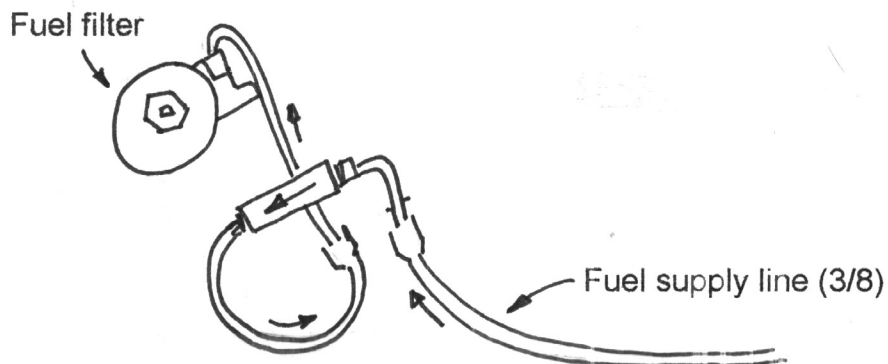

1. Disconnect the quick connect couplings in the fuel supply line. The larger of the 2 lines (3/8") is the supply line and is usually indicated with blue labeling. You will need a quick disconnect tool for this.
2. Connect the tail of kit to the end of the fuel feed line.
3. Connect the head end of the to the line going to the fuel filter.
4. Position the Tadger so that it is attached to nearby hoses or supported.
5. Tighten all connections where applicable.
6. Tie off the Tadger kit securely with ties to minimize movement. It does not require a solid mounting bracket.
7. Tie off any hoses to avoid rubbing.
8. If metal on metal, wrap the Tadger kit with loom to avoid wear and damage.

Bill Tallman

Tadger Installation Team 519-643-8255 cell