



Tadger Group Gas Install Instructions for Kit #:

G6-TB-R


ORIGINAL ENGINE FUEL LINE SETUP

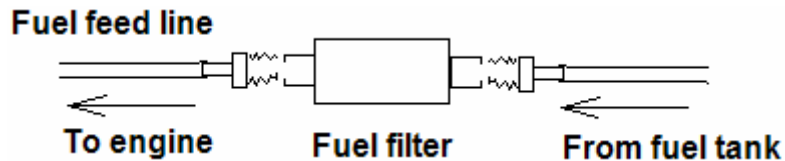

TADGER KIT

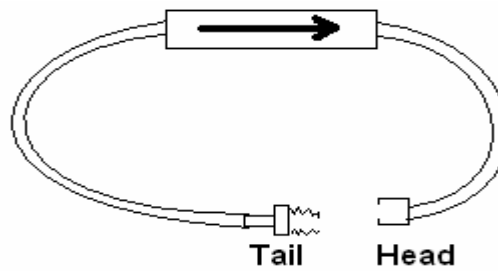

INSTALLATION

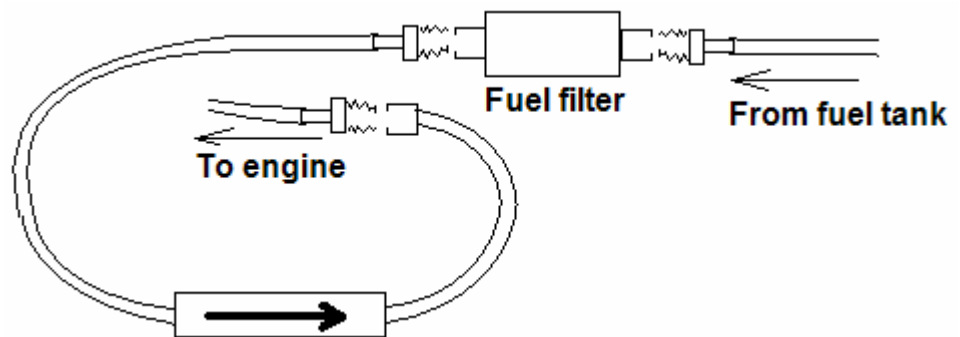

1. Locate fuel filter, usually under vehicle near driver door.
2. Disconnect fuel line at nut on front of fuel filter.
3. Move fuel feed line slightly to one side.
4. Insert tail of kit into fitting on front of fuel filter.
5. Attach head end of kit to end of fuel feed line leading to engine.
6. Tie off Tadger kit securely with ties to minimize movement. It does not require a solid mounting bracket. Use loom or rubber to separate components at any point where rubbing may occur.

Bill Tallman
Tadger Installation
519-643-8255