



DT 466 Mechanical


ORIGINAL ENGINE FUEL LINE SETUP

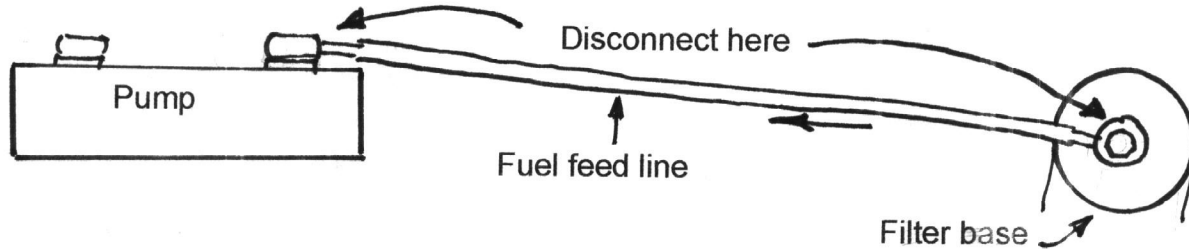

TADGER KIT



INSTALLATION

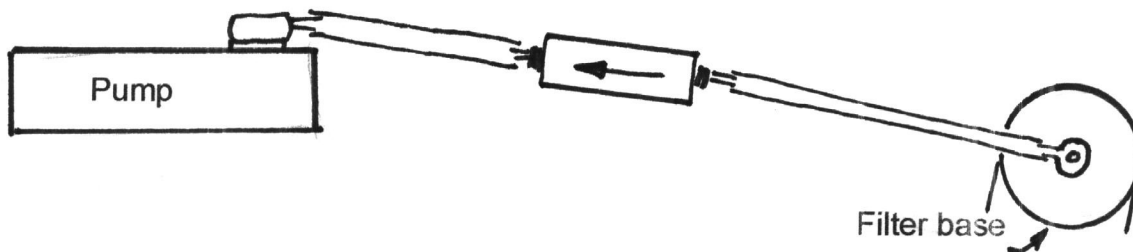

1. Disconnect fuel feed line running from filter base to injection pump at banjo fittings. Keep all 4 banjo washers as they will be needed for the new banjos (2 for each banjo).
2. Arrange the 2 banjos so that they are 90 degrees to each other.
3. Tighten the hose clamp supplied.
4. Attach the head end of the kit at the pump, using the 2 banjo washer, one on each side of the banjo.
5. Repeat step 4. for the tail end of the kit at the filter base.
6. Tie off the Tadger kit securely with ties to minimize movement. It does not require a solid mounting bracket.
7. If metal on metal, wrap the Tadger kit with loom to avoid wear and damage.

Bill Tallman

Tadger Installation Team 519-643-8255 cell