



# DT466

## ~1999 Fuel feed on side of filter base


### Original Engine Fuel Line Setup

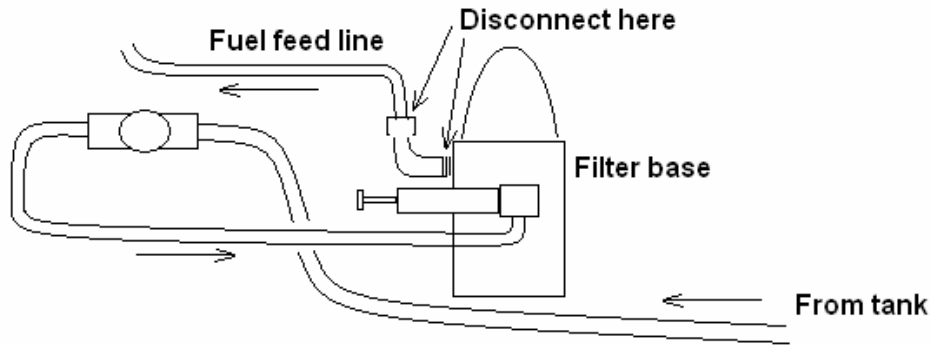

### Tadger Kit

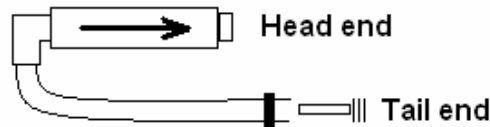

### Installation

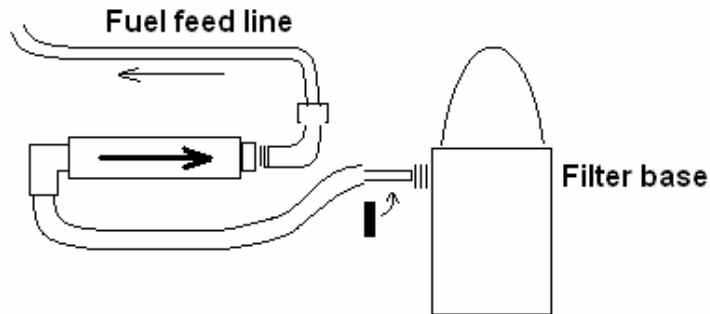

1. Disconnect fuel feed line by undoing nut at elbow.
2. Remove elbow from side of filter base.
3. Insert elbow into head of Tadger kit using High Temp. Thread Sealant but do not tighten yet.
4. Insert new hose barb fitting into side of filter base using High Temp. Thread Sealant.
5. Before attaching kit, determine how kit will be positioned. Kit may be easier to tie off if Tadger is perpendicular to fuel feed line (tail end is pointing away from engine and resting on priming pump). When position is determined, tighten elbow on head of kit to get proper angle.
6. Connect tail of Tadger kit to hose barb at filter base. Tighten clamp later.
7. Reattach elbow on head of Tadger kit to fuel feed line. Tighten all connections and clamps.
8. Tie off in several places using heavy cable ties to minimize movement of Tadger.
9. If metal on metal, wrap Tadger kit with loom to avoid wear and damage.

**Bill Tallman**

**Tadger Installation Team 519-643-8255 cell**