



DT466 / 530 05+


Original Engine Fuel Line Setup

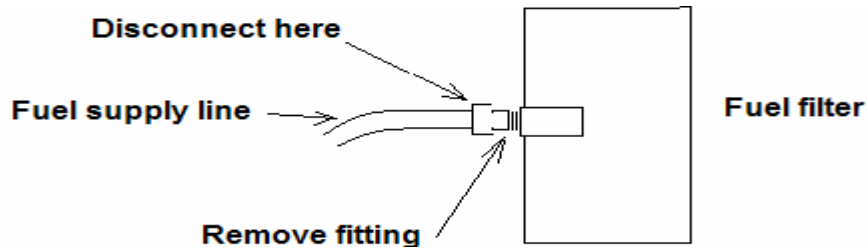

Tadger Kit

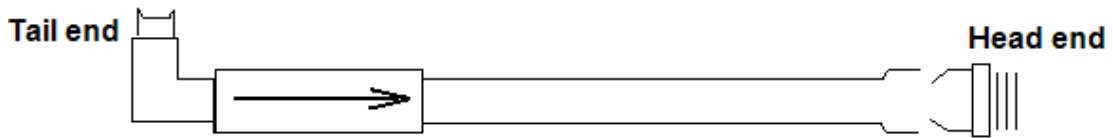

Installation

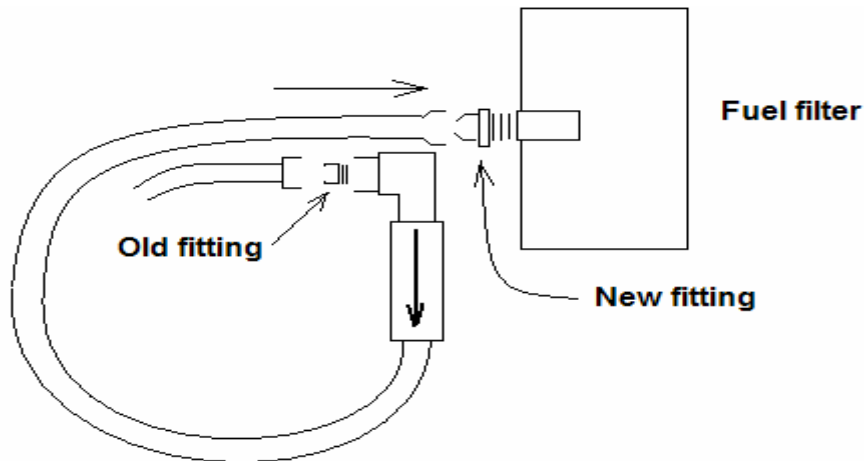

1. Remove fuel supply line by disconnecting it at fuel filter. Keep the sealing washer.
2. Remove fitting in fuel filter.
3. Insert this removed fitting into tail of Tadger kit. NO sealant is required.
4. Insert new fitting in fuel filter. NO sealant is required.
5. Bend end of fuel supply line down and outward about 1-2" (3-5 cm).
6. Connect tail end of Tadger kit (with old fitting installed) to end of fuel supply line.
7. Connect head end of Tadger kit to fitting that you just inserted into fuel filter.
8. Tighten all connections.
9. Tie off in several places using heavy cable ties to minimize movement of Tadger.
10. If metal on metal, wrap Tadger kit with loom to avoid wear and damage.

Bill Tallman

Tadger Installation Team 519-643-8255 cell

