



DT466 / DT 530

00-04


Original Engine Fuel Line Setup

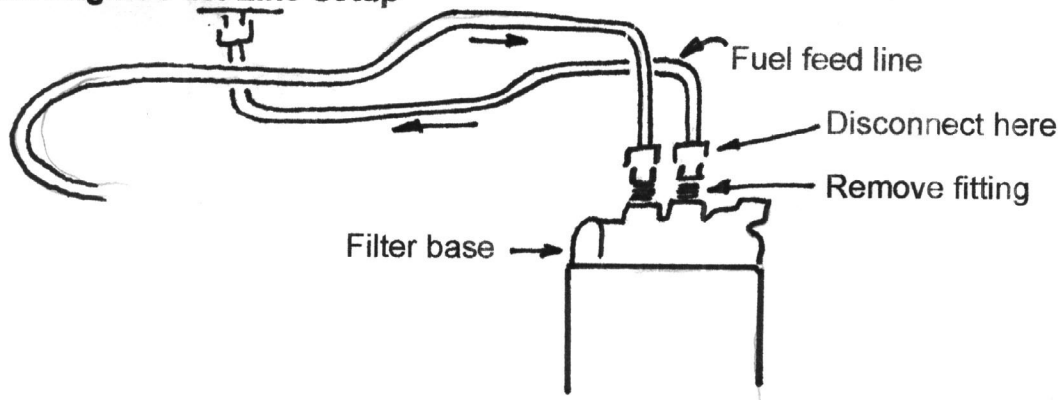

Tadger Kit

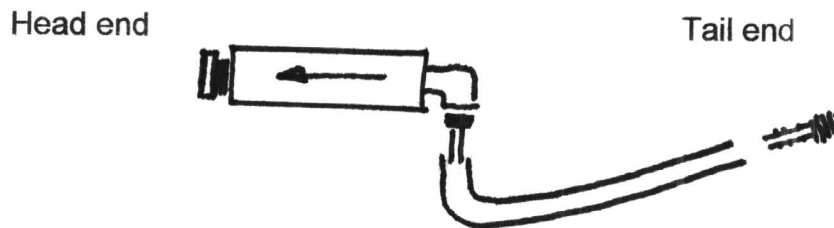

Installation

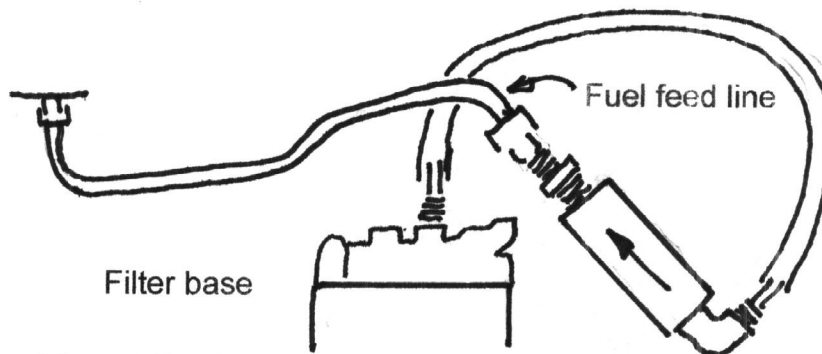

1. Disconnect fuel feed line at filter base.
2. Remove fitting in top of filter base.
3. Insert new fitting in top of filter base using High Temperature Thread Sealant.
4. The fitting that you just removed from the filter base . . . insert this fitting in the head end of the Tadger kit using High Temperature Thread Sealant.
5. Bend the end of the fuel feed line up and to the right.
6. Connect head end of Tadger to end of fuel feed line.
7. Attach tail end of Tadger kit to fitting that you just inserted into filter base.
8. Tighten hose clamp on tail end of kit
9. Tighten all connections at end and middle of kit.
10. Tie off hose on tail of kit to fuel feed line or to Tadger itself.
11. Tie off in several places using heavy cable ties to minimize movement of Tadger.
12. If metal on metal, wrap Tadger kit with loom to avoid wear and damage.

Bill Tallman

Tadger Installation Team 519-643-8255 cell