


John Deere 4 cyl. mechanical with #5 fittings

ORIGINAL ENGINE FUEL LINE SETUP

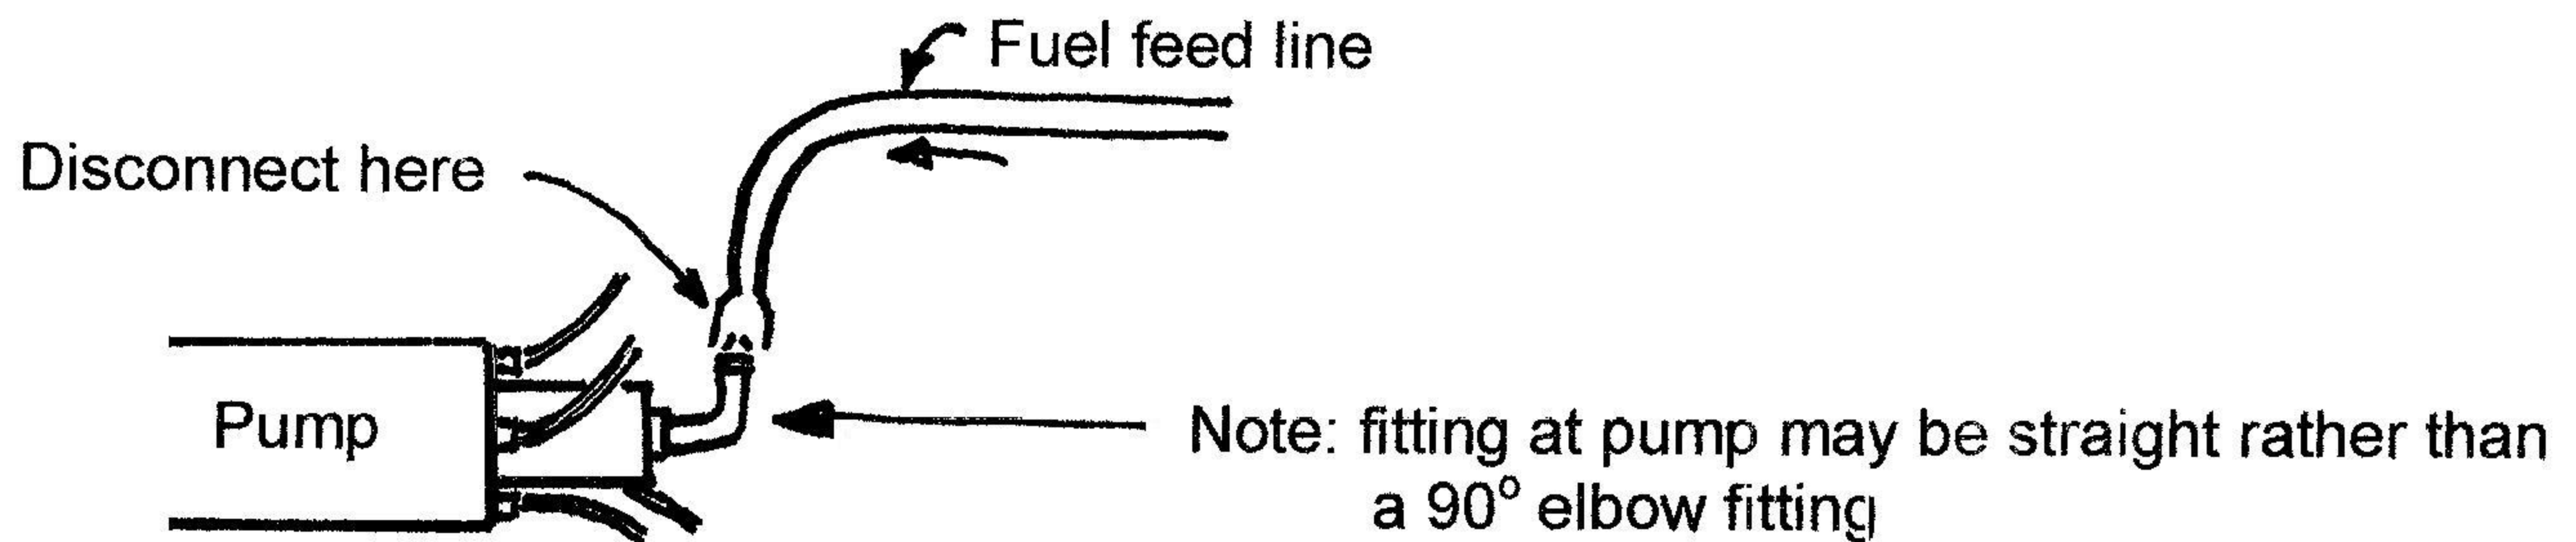


TADGER KIT

Head end

Tail end



INSTALLATION

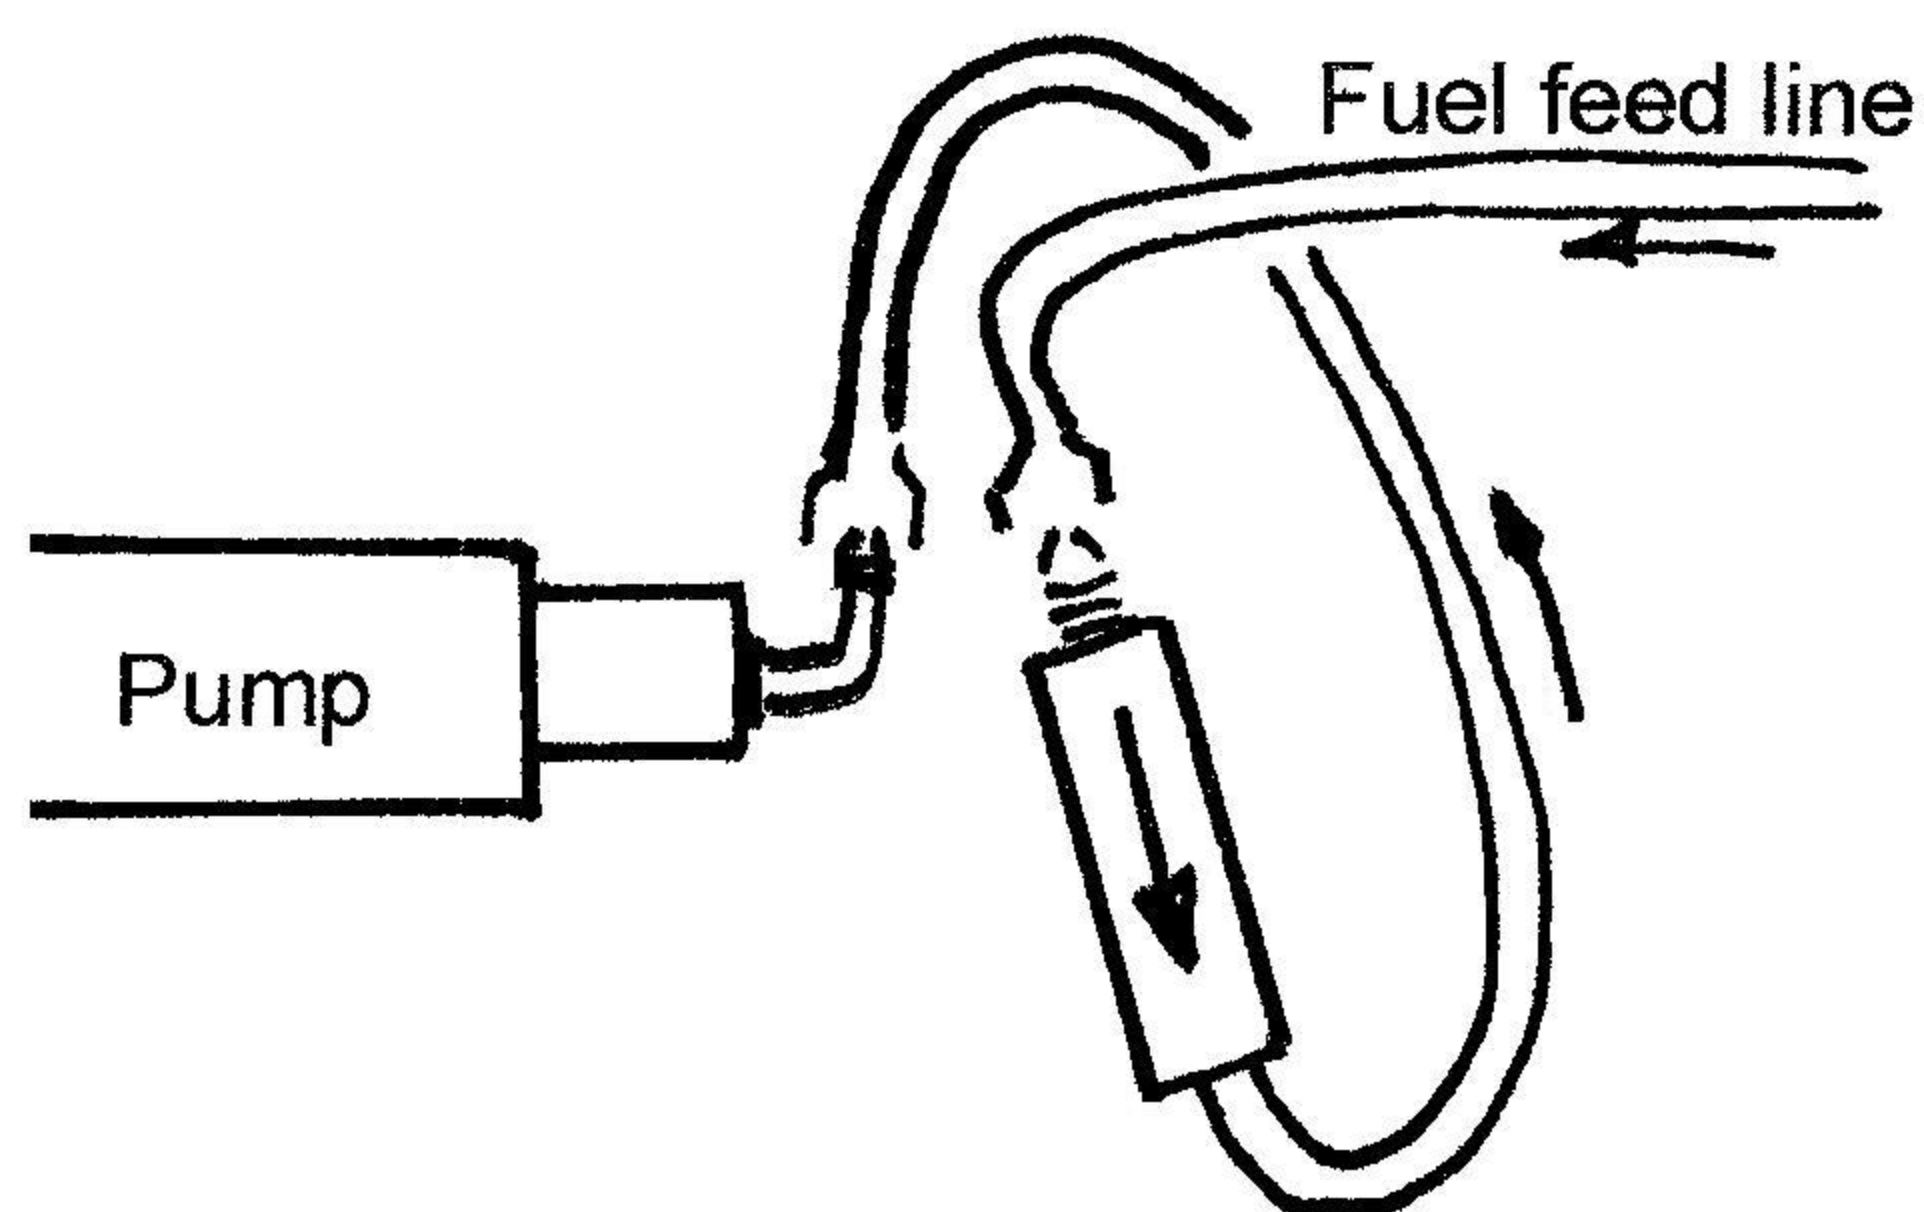

1. Disconnect fuel feed line at #5 fitting at pump. Use penetrating oil if corroded.
2. Bend fuel feed line sideways about 5 cm (2") to allow space for connection of kit.
3. Attach tail of kit to female connector on fuel feed line.
4. Attach head of kit to male connector on pump.
5. Tie off Tadger kit securely with ties to minimize movement. It does not require a solid mounting bracket.
6. If metal on metal, wrap Tadger kit with loom to avoid wear and damage.

Bill Tallman

Tadger Installation Team 519-643-8255 cell