



# MaxxForce 13 L


ORIGINAL ENGINE FUEL LINE SETUP (Viewed from driver side of truck)

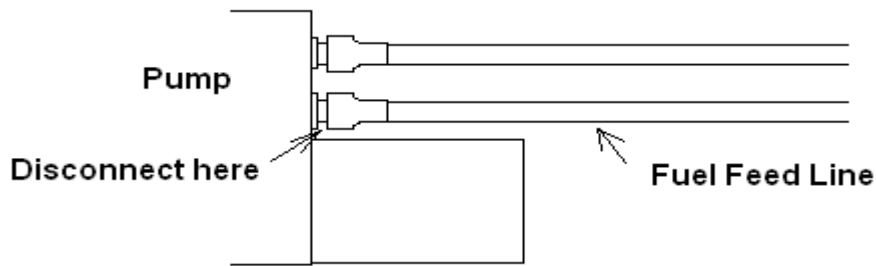

## TADGER KIT

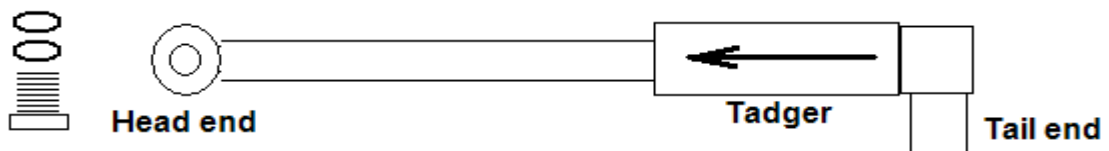

## INSTALLATION

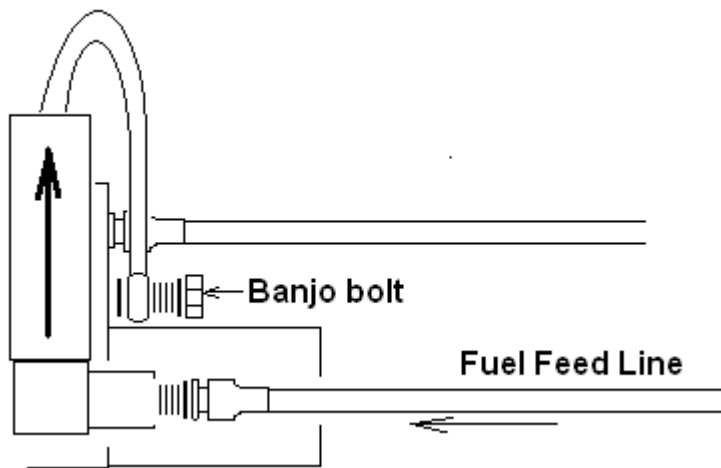

1. Disconnect fuel feed line at high pressure pump. You may be able to remove fitting from pump without removing quick disconnect. Be sure to retain washer as it will be needed.
2. Insert removed fitting (on end of fuel supply line) with washer, into tail end of Tadger kit.
3. Connect banjo (on head of kit) to fuel pump using banjo bolt and 2 washers supplied.
4. Tighten all connections. Tie off kit to its own hose and to large nearby hose to minimize movement. It does not require a solid mounting bracket.
6. If metal on metal, wrap Tadger kit with loom to avoid wear and damage.

**Bill Tallman**

**Tadger Installation Team 519-643-8255 cell**